

Global Parameters

Category	Parameter	NRPN		SysEx Address			SysEx Length	Data	Default	Description
		LSB (62)	MSB (63)	MSB to LSB						
Tune	Transpose	01	00	00	01	00	01	3A - 40 - 46 (-6 - 0 - 6)	40	0
	Master Tune	01	02	00	01	02	02	032E - 0338 - 0342 (430 - 440 - 450)	0338	440
Expression	Source	02	00	00	02	00	01	00 - 01 00: Pedal (normal) 01: Pedal (reverse) 02: MIDI	00	Pedal (normal)
	Min. Level	02	08	00	02	08	01	00 - 09 (Off, -40dB - 0dB)	06	-35dB
	Min. Limit LF	02	09	00	02	09	01	00 - 08	05	-20dB
	Min. Limit HF	02	0A	00	02	0A	01	(Off, -40dB - -5dB)	03	-30dB
Foot Switch	FS Device	03	00	00	03	00	01	00 - 01 (Foot Sw., Leslie Sw.)	00	Foot Sw.
	FS Tip Mode	03	01	00	03	01	01	00 - 25 00: Off 01: Leslie Fast (alternate) 02: Leslie Fast (momentarily) 03: Leslie Fast (tri-state) 04: Glide 05: Patch Fwd. 06: Patch Back 07: Favorite Fwd. 08: Favorite Back 09: Spring Shock 0A: Delay Time 0B: Music Start 0C: Manual Bass 0D - 25: Bass 1C - 3C	01	Leslie Fast (alternate)
	FS Ring Mode	03	02	00	03	02	01	same as FS Tip mode	01	Leslie Fast (alternate)
	Damper Org. Upper	03	03	00	03	03	01	00, 01 (Off/On)	01	On
	Damper Org. Lower	03	04	00	03	04	01	00, 01 (Off/On)	01	On
	Damper Org. Pedal	03	05	00	03	05	01	00, 01 (Off/On)	01	On
	Damper Extra Voice	03	06	00	03	06	01	00, 01 (Off/On)	01	On
	Octave Down Mode	03	07	00	03	07	01	00 - 07 00: Origin 01: Leslie Stop 02: Leslie Fast 03: Vibrato Upper 04: Vibrato Lower 05: Glide 06: Spring Shock 07: Delay Time	00	Origin
	Octave Up Mode	03	08	00	03	08	01	same as above	00	Origin
	Octave Lower Mode	03	09	00	03	09	01	same as above	00	Origin
Patch Load	Drawbar Regist. Upper	60	00	00	60	00	01	00, 01 (Off/On)	01	On
	Drawbar Regist. L/P	60	01	00	60	01	01	00, 01 (Off/On)	01	On
	Drawbar Parameters (DRAWB)	60	02	00	60	02	01	00, 01 (Off/On)	01	On
	Extra Voice (EXV)	60	03	00	60	03	01	00, 01 (Off/On)	01	On
	Internal Zone (INT)	60	04	00	60	04	01	00, 01 (Off/On)	01	On
	External Zone (EXT)	60	05	00	60	05	01	00, 01 (Off/On)	01	On
	Organ Effect (DRAWB)	60	06	00	60	06	01	00, 01 (Off/On)	01	On
	Extra Voice Effect (EXV)	60	07	00	60	07	01	00, 01 (Off/On)	01	On
	Reverb (REV)	60	08	00	60	08	01	00, 01 (Off/On)	01	On
	Animation (ANI)	60	09	00	60	09	01	00, 01 (Off/On)	01	On
Favorites	Overwrite Patch	04	00	00	04	00	01	00, 01 (Off/On)	00	Off
Display	Short Cut	--	--	--	--	--	--	0, 1, 2s, No		
	Time Out	--	--	--	--	--	--	4, 8, 16s, No		
	Pop Up	--	--	--	--	--	--	No, 0.5, 1, 2s		
Master EQ	Bass Freq.	02	0F	00	02	0F	01	00 - 0A (20 - 200Hz)	07	100Hz
	Treble Freq.	02	10	00	02	10	01	00 - 03 (4.0k - 8.0kHz)	03	8.0kHz

Example Set Transpose at 0 via NRPN Bx 62 01 63 00 06 40 (x = Upper channel)
Set Transpose at 0 via System Exclusive F0 55 dd 10 1D 13 00 01 00 40 F7 (dd = Device ID)